



# Instructions

## Basic learning

Press the left hand button for 3 seconds to start basic learning.  
 The red LED flashes until the background level has been sampled.  
 The green LED flashes for a further 3 minutes, or until the foot is armed.  
 This indicates a successful set up.



## Smart learning

Press the right hand button for 3 seconds to start smart learning.  
 The red LED flashes until the background level has been sampled.  
 The yellow LED flashes until the alarm has been successfully learnt.  
 The green LED flashes for a further 3 minutes, or until the foot is armed.  
 This indicates a successful set up.



Pressing any button or moving the foot during the sequence will cancel smart learning.

## Reset

Hold the top button for three seconds to clear any fault (indicated by the flashing red LED).



## Factory Defaults





Press and hold the bottom button for 6 seconds to reset to factory defaults.



## Monitoring

Once set up, the unit monitors the alarm when the foot is depressed. The LED on the front flashes periodically. The door closes when the alarm is heard. If the battery requires replacement, or the battery compartment door is opened, the foot cannot be latched down unless an alarm is set up and the unit is assembled with a good battery.

## Tones

-  High-low repeated 5 times: Indicates the door is about to close.
-  Low-high: Indicates setup required.
-  Low-high-low: Indicates the battery door is open.
-  Low-high-low-high: Indicates replace the battery. Audio beeps at 30 second intervals.

## LED Status

- Monitoring: The red LED on the front of the unit flashes every 30 seconds.
- Replace Battery: All LED's flash together every 5 seconds.
- Fault: Flashing red LED



Manufactured to comply with BS-EN-1155  
 Certification number: AE5010  
 www.sonicco.com

Designed in the UK  
 Made in PRC  
 V1.12PI.210618